


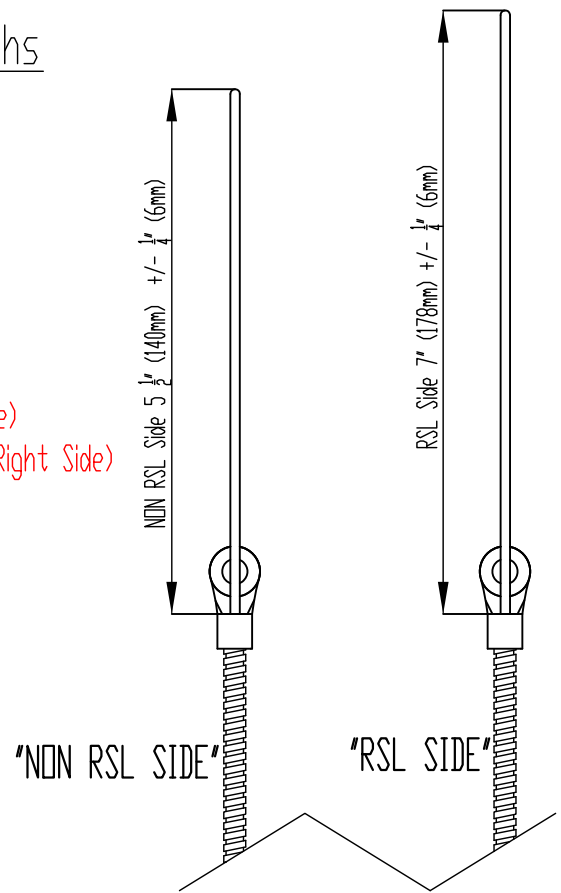

Cutaway Cable Trim Lengths

November 2014 Rev 2

1. Compressible Housings (1987-1997 approx.)
2. Non-Compressible Housings (1997-Present) Standard RSL Style. (Left Side)
3. Non-Compressible Housings (2007-Present) Split housings Skyhook Style. (Right Side)
4. For Non-RSL/Skyhook- 5 $\frac{1}{2}$ " to the wearers left and 7" to the right.



INSTALLATION OF RELEASE HANDLE AND TRIMMING THE CABLES TO SIZE

Sun Path sends out new release handles already "Cleaned and lubricated" using a dry silicone spray (food grade.)

1. First thread the 2 yellow release cables through the housings, then secure the release handle to the Velcro on the main lift web in the highest position that the handle will mate to the Velcro.
2. Ensure housings are laying in the assembled resting position when measuring. Trim with cable cutter to the length given shown above.
3. To remove the sharp edges of the plastic surrounding the trimmed cable. Use a lighter and mildly heat only the very tip, then quickly smooth the heated yellow plastic using your fingers. Repeat till satisfactorily smooth.
4. Assemble the main risers to the rig and lock in place with the cable (Ref. Javelin/Odyssey Manual, 3-ring Release-Assembly).

Note: For Skyhook RSL, ensure the Collins Lanyard is correctly routed.

MAINTENANCE

Every 3 months the release cables should be cleaned by removing the cables, Spray silicone spray on a paper towel or cotton cloth and firmly wipe the cable a few times. A thin, invisible film should remain. Then return cable per steps 1 and 4 of these instructions.